


Measuring For Countertops:

Below is a step-by-step guide for drawing and measuring your countertop. To make it easier to draw your countertops, we have provided a Countertop Order Form on our website that can be printed and used.

New and Replacement Countertops:

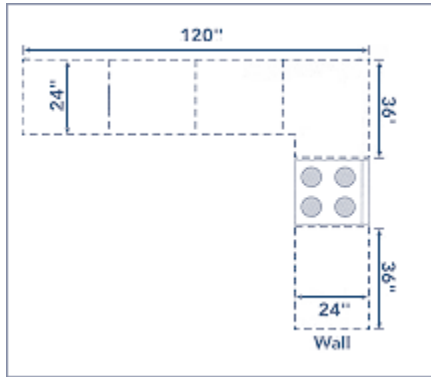

Countertop measurements for new and for replacement of countertops are done in the same manner. Some cabinets are non-standard depths. For this reason, you must know the exact dimensions of the cabinets. Standard Kitchen depth is 24" and standard Vanity depth is 22", if your cabinets are any other depth, be sure and state this.

1. Measure the total length for each cabinet segment along the back wall. We need the exact length the countertop needs to be, not just the length of the cabinet.
2. Measure the depth of each cabinet segment. Be sure note the exterior dimension, excluding the thickness of the door.



3. Verify if the angle is a true 90 degrees. Measure three feet on the wall from the corner and four feet on the other side and mark both measurements. Measure the cross distance between the two wall points. A perfect 90 degree wall corner should indicate five feet.
4. Indicate the location of walls and appliances.
5. Complete the finishing instructions

Finishing:

1. To allow for the proper clearance of cabinet doors, indicate the type of countertop "form" or "built-up".



2. The ends of countertops must always be finished. Three types of finished ends are available. Usually an apparent end of a countertop or island will be finished "Full", whereas the ends butting up against appliances are often finished "Profile". End (or "return") splashes are used exclusively against walls.



3. Indicate how the bartop ends are to be shaped.

